



ARMING SYSTEM WHEN STAYING AT HOME

- Wait for green 'Ready' light to come on
- Press 'Stay' button once

This will alarm the house and allow an entry delay.

INSTANT ARMING IN STAY MODE

- Wait for green 'Ready' light to come on
- Press the 'stay' button twice. The instant' LED will come on.

This will alarm the house with no entry delay.

DISARMING

- Enter your user code

BYPASSING OF ZONES

- Press 'bypass button', it will flash.
- Enter the zone number that you want to bypass.
- Press 'bypass' button again.

The bypass light will stop flashing and will be steady.

SETTING TIME AND DATE

If your trouble condition light is on press *2 and if light 8 comes on you need to re-set the time and date as follows:

- To set the time: *97 9master code0 1410
- To set the date: *96 9master code0
- Day of the week: Monday -2
- Month -3
- Day -01
- Year - 04

If code is required to bypass, please enter your user code after pressing the 'bypass' button.

TROUBLE CONDITIONS

From the keypad type "**2". If you have a LCD keypad on the system you can read of the display what type of error condition exist on the system, but if you have a LED keypad the error conditions is listed by a LED light on the keypad that burns according to a number. Each number represents a different error condition.

LED 1 – "System Fault. Press 1 for more information. Below is a list of trouble conditions

1 – Overcurrent Fault, 2 – Siren Trouble, 3 – Box Tamper, 4 – Expander Trouble, 5 – Expander Low Battery, 6 – Expander Box Tamper, 7 – Expander Trouble, 8 – Ground Fault

LED 2 – Zone Tamper

LED 3 – Zone Low Battery

LED 4 – Zone Loss of supervision (Press the 4 key for more information)

LED 5 – Zone Trouble (Press the 5 key for more information)

LED 6 – Telephone Line Cut/Trouble

LED 7 – Failure to communicate

LED 8 – Loss of time and date.

