



ARMING SYSTEM WHEN STAYING AT HOME

- Wait for green 'Ready' light to come on
- Press 'Stay' button until it beeps
- The red 'Armed' light will come on

ARMING SYSTEM IN STAY MODE WITHOUT ENTRY DELAY

- Wait for green 'Ready' light to come on
- Press '9' and your user code
- The red 'Armed' light will flash

By arming in this way an Entry delay will be on the front door.

ARMING WHEN LEAVING THE HOUSE

- Wait for green 'Ready' light to come on
- Press 'Away' button until it beeps or enter your user code.
- The red 'Armed' light will come on.

DISARMING

- Enter your user code

BYPASSING OF ZONES

- Press '1' and the zone number that you want to bypass.
- Please ensure that the zone number is two digits (i.e. 02)
- Press the '#' key

SETTING TIME AND DATE

- If your trouble condition light is on press *2 and if light 8 comes on you need to re-set the time and date as follows:
- Press *6 (master code) [1]
- Enter time e.g. 1400
- Enter month (02), day (19), year (06)
- Press '#' key

If a code is required bypass please enter user code after '1'

SYSTEM TROUBLE CONDITIONS

Should the system detect a trouble condition the keypad trouble light will turn on. To view the relevant trouble condition, press *2. One or more of the following trouble conditions will appear:

1. Service required call your security service provider.
2. AC power loss
3. Telephone line fault
4. Fail to communicate
5. Zone fault
6. Zone tamper
7. Zone battery low
8. Loss of clock

