



ARMING SYSTEM WHEN STAYING AT HOME

- Wait for green 'Ready' light to come on
- Press and hold down 5 key until you hear a beep
- The armed Red light will come on.

ARMING SYSTEM IN STAY MODE WITHOUT ENTRY DELAY

- Wait for green 'Ready' light to come on
- Press and hold down '1' until you hear a beep, exit delay beeps should now begin, you may now exit.
- OR enter your user code exit delay beeps should now begin, you may now exit.

DISARMING

- Enter your user code
- Should you make a mistake press the hash Key (#) and re-enter your user code.

BYPASSING OF ZONES

- Confirm panel is DISARMED
- Press the [*] key (while bypassing zones, violated zones will be flashing0.
- Press the number corresponding to the zone you need to bypass e.g. the [2] key if you wish to bypass zone 2.
- Repeat steps 1 and 2 to bypass any other zones.

OR

- Confirm panel is DISARMED
- Hold [9] till beep
- Press the number corresponding to the zone you need to bypass then star [*], e.g. the [2] key if you wish to bypass zone 2.
- NOTE: Bypassed zones will be cleared when system is disarmed.

TROUBLE CONDITIONS

If the POWER LED is flashing (or if so programmed, the keypad is beeping) hold down the [7] key for one second to see which zone indicator is on

Indicator	Trouble Condition
2	Failure to communicate to monitoring company
3	Mains power failure
4	Low battery
5	The telephone line has been cut or is not present
6	The siren wire has been cut or the fuse has blown
7	Keypad has experienced a tamper
8	Installers code must be entered to clear an alarm condition

Note: if the trouble has been fixed pressing the [#] key within 5 seconds of entering the trouble view will clear the trouble condition indicator.

